

Instructions for use

⚠ Cautions Please be sure to comply with these points otherwise breakage, loss or injury may be caused.


- Please do not use this product in places with direct sunlight, in direct contact with the heat from heaters or in significantly dry places.
- Do not use materials other than paper, such as vinyl envelopes, film-coated postcards or paper with adhesive labels in this product.
- The kind of paper and number of sheets that can be used in this product are as follows: up to 2 sheets photocopying paper (high-quality paper 64g/m²) or 1 postcard (approx. 0.2mm). There are certain types of special paper that cannot be used in this machine.
- Be sure to definitely remove any kind of metal parts such as staples or clips before usage.
- Do not put your hand or fingers in the input or output openings or inside the moveable part of the handle.
- Please be careful not to get your clothes or hair tangled up in the machine.
- Do not take this product apart or modify it.
- Please do not drop the product on a hard floor or do anything to cause a strong impact to the product.
- If anyone else is going to use the product please instruct them to read the instructions first before usage.

How to use the product

- ① Insert the paper into the input opening. In order to stop the paper falling, hold it with the thumb on your left hand whilst rotating the handle a little to the right with your right hand and feed the paper onto the blade.

⚠ Cautions

Be careful to put the paper in straight without folding it.

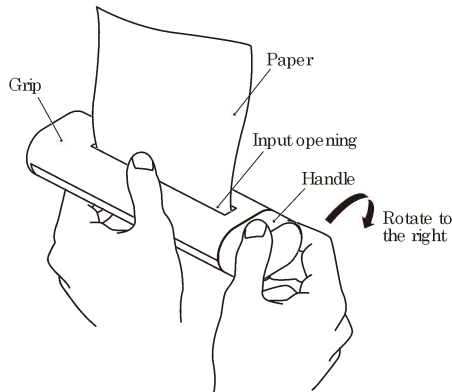


*It is effective if you insert the paper with the cutting direction opposite to the direction of the lines of lettering.

- ② Grasp the clip on the left side of the main body with your left hand and rotate the handle to the right with your right hand. As you continue to turn the handle the cut paper comes out of the output opening. Keep turning the handle and do not remove the cut paper halfway through the process.

⚠ Cautions

When you grasp the clip, block the output opening so that your fingers do not go inside it. If the movement of the handle feels too hard with 2 sheets of paper in the machine please use it with only one sheet at a time.

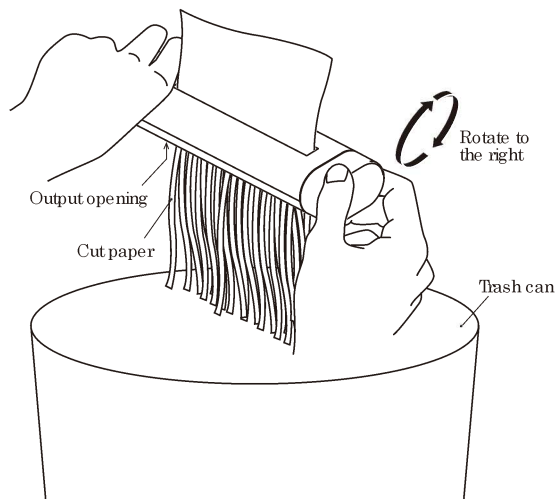

*Use the shredder over a trash can or similar object to prevent the waste paper making a mess.

How to use the product

■ Reasons why the paper becomes jammed


- If you insert too many sheets of paper or put the paper in slanting or folded, the shredder will be unable to cut them and will become jammed.
- If you use vinyl envelopes or film-coated postcards, the shredder will be unable to cut the vinyl or film and they will stretch and get completely wrapped around the blade.
- If you use postcards with adhesive labels stuck to them, the paper may get caught up in the blade due to the adhesive.

⚠ Cautions

Please do not use the product if the paper is jammed in or wrapped around the blade. This may cause breakage of the product.

■ How to handle problems

- ① If the handle is not turning smoothly or stops moving during usage, rotate the handle in the opposite direction (to the left) and remove the paper from the input opening. If shredded paper is coming out of the output opening, cut the paper close to the output opening with scissors and take it off and then rotate the handle in the opposite direction (to the left).

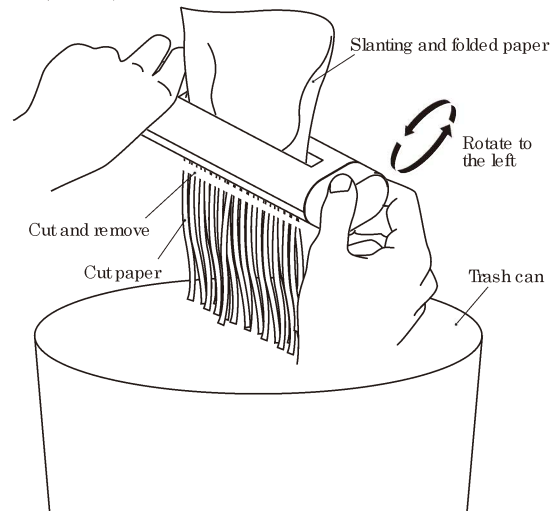


*Use the shredder over a trash can or similar object to prevent the waste paper making a mess.

- ② When you have removed the paper from the input opening, look at the blade from the output opening to check whether the paper is jammed in or wrapped around it. If there is any paper there please remove it with an item such as tweezers.

⚠ Warning

Do not touch the edge of the blade. This can cause injuries.

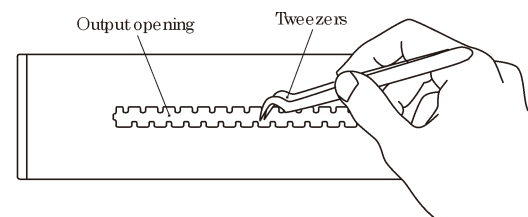

How to use

For everyday care of the product please wipe lightly with a dry and soft cloth. When it is heavily soiled, please follow the steps below to remove the soiling.

- ① Please remove the soiled part by lightly wiping it with a cloth containing diluted detergent.
- ② Wipe dry with a cloth to remove any traces of detergent or water. Please refrain from leaving the product wet, or using cleaning products such as alcohol or thinner, acid or alkaline detergent on the product. These may cause the product to rust or change color.

Ryohin Keikaku Co., Ltd.

Customer Support Room, Telephone 0120-14-6404